



# TRAVERSE™ WELDING HELMET ADAPTER

## PRODUCT INFORMATION

TRANSFORM  
YOUR TRAVERSE™  
**MAKE IT  
WELD-READY**



*\*Photos for demonstrative purposes only, welding helmet not included. Competitive brands are a trademark of their respective company, and are not affiliated with or endorsed by PIP Global Safety.*

### Traverse™ Welding Helmet Adapter

280-HP1491WELD

- Lightweight, durable, and easy to connect
- Fits cap-style safety helmets which do not feature edging elements (such as a rain trough) including PIP® Traverse™, Rocky™, and JSP® Alta™
- Includes interchangeable washer types for compatibility with most major brands:



**Black Washer = Jackson®**



**Red Washer = Lincoln®**



**Orange Washer = Fibre Metal®**



**Blue Washer = Miller®**

*NOTE: Competitive brands are a trademark of their respective company, and are not affiliated with or endorsed by PIP Global Safety.*

**SEE BACK PAGE FOR INSTRUCTIONS**





# TRAVERSE™ WELDING HELMET ADAPTER INSTALLATION GUIDE



- 1** Remove suspension harness included with welding helmet.




- 2** Disassemble the front adapter arm. Note the location of the black rubber O-ring.



- 3** Select corresponding washer based on brand guide, or helmet keyhole shape.



- 4** Insert washer from inside of welding helmet.

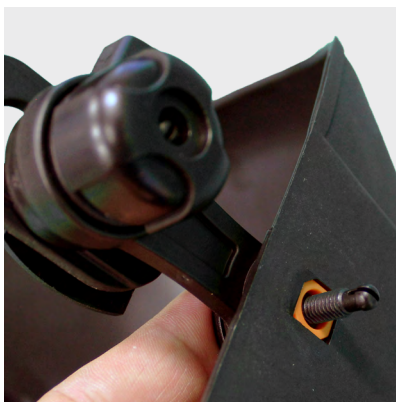


- 5** Thread welding helmet onto adapter.




- 6** Secure with adapter knob from the outside.



- 7** Align adapter with universal accessory slots on safety helmet.

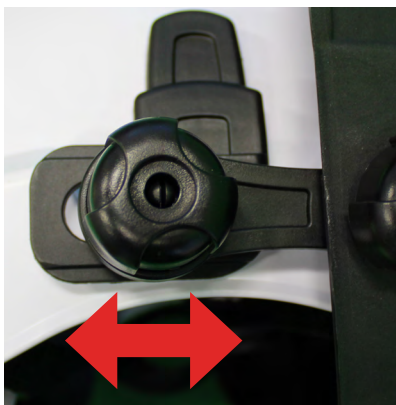

- 8** Click into place. Loosen secondary knob to adjust horizontal position, and retighten.

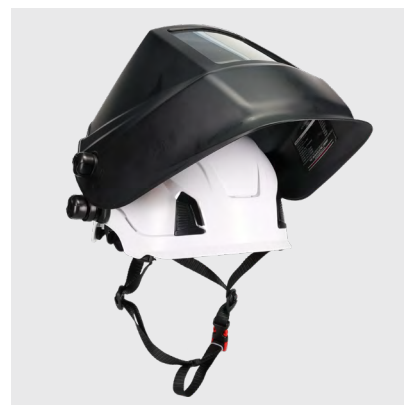

- 9** Repeat on both sides to complete assembly.