

EARPLUGS FITTING INSTRUCTIONS

Keys to Successful Hearing Protection with Earplugs

Wear


- Read and follow all earplug fitting instructions

Selection


- Avoid overprotection in minimal noise environments – in selecting the best earplug for your situation, consider noise levels and your need to communicate with co-workers or hear warning signals on the job

Maintenance

- Inspect earplugs prior to wear for dirt, damage or hardness – discard immediately if compromised
- For proper hygiene, discard Single-Use earplugs after use
- With proper maintenance, Multiple-Use earplugs can last for 2-4 weeks; clean with mild soap/water and store in a case when not in use
- Clean and replace pods on Banded earplugs regularly

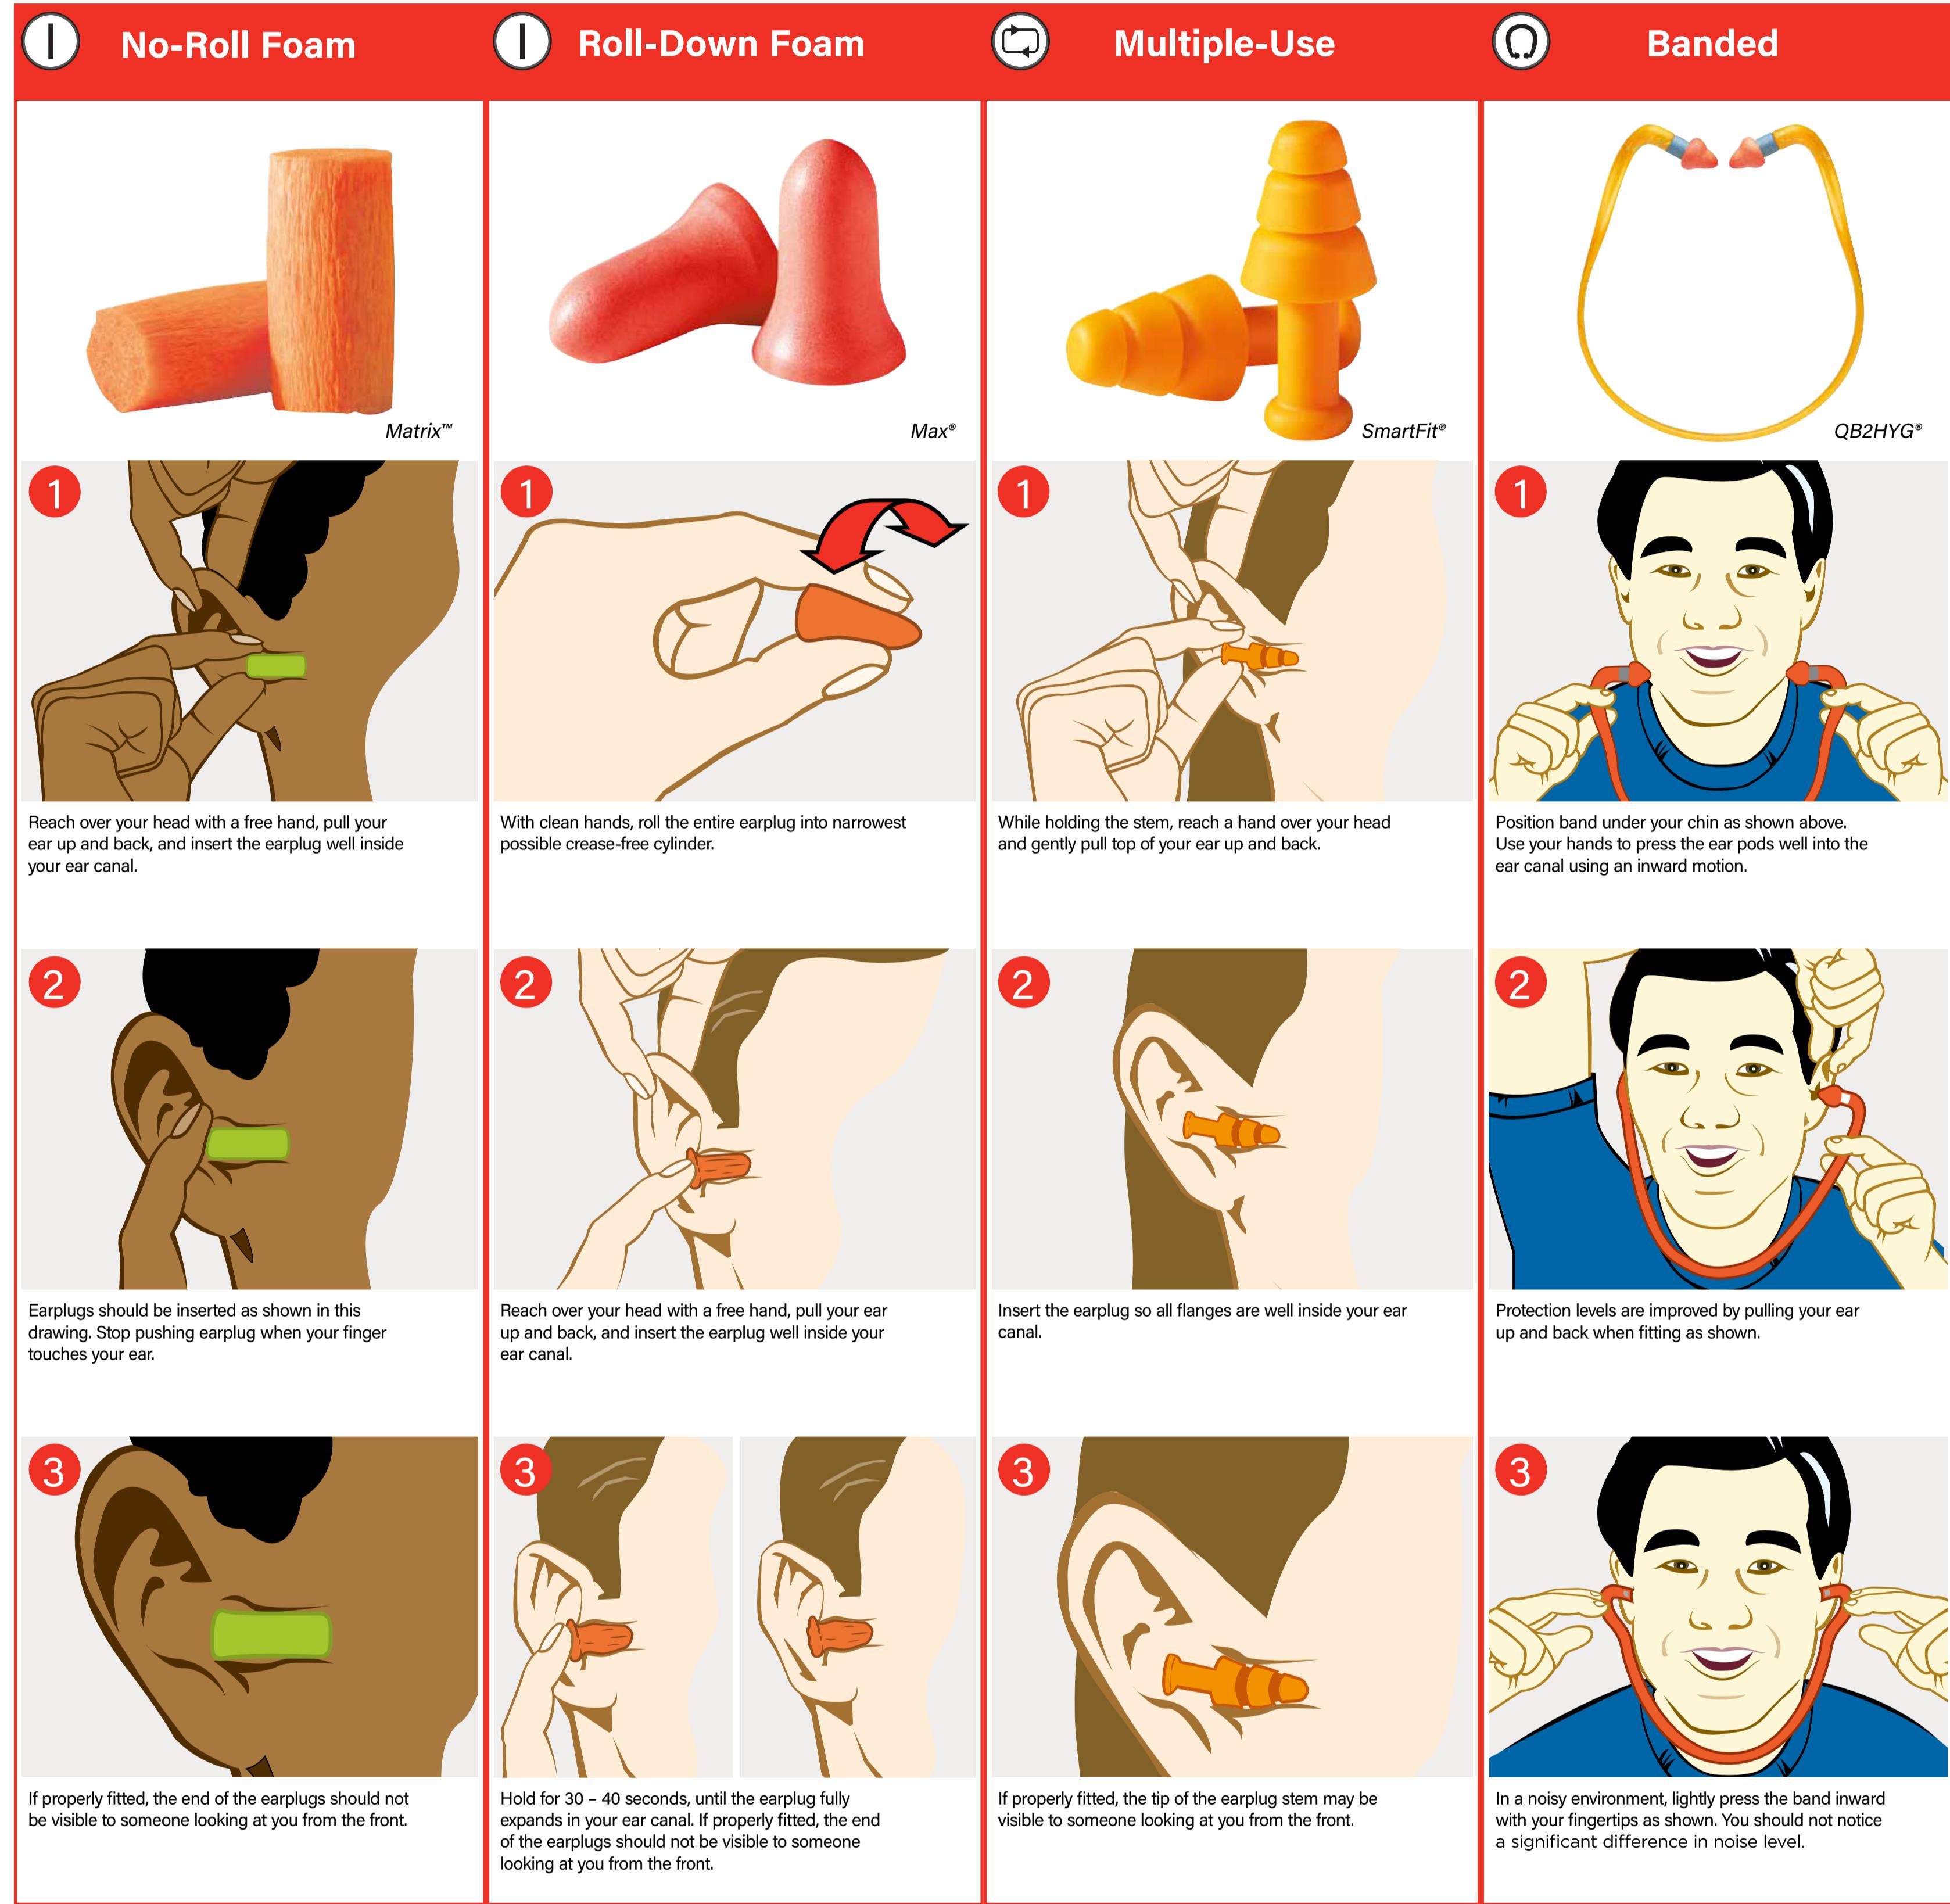


Do's and Don'ts of Howard Leight Earplugs

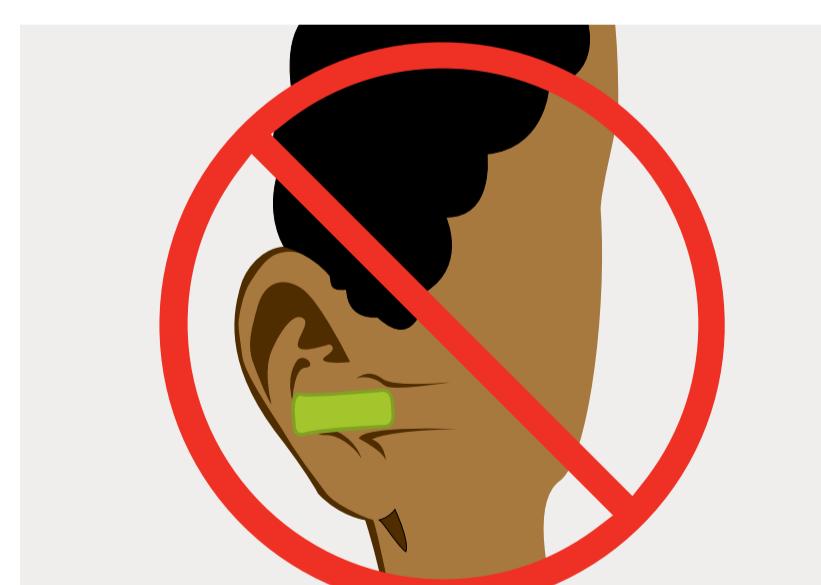

Proper Fit

If either or both earplugs do not seem to be fitted properly, remove the earplug and reinsert.

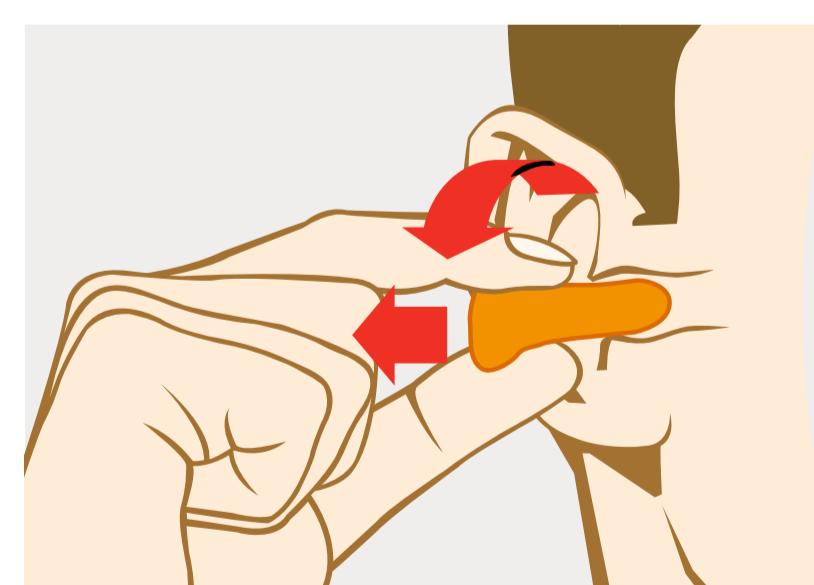

Removal

Gently twist earplug while slowly pulling in an outward motion for removal.



Acoustical Check

In a noisy environment, with earplugs inserted, cup your hands over your ears and release. Earplugs should block enough noise so that covering your ears with your hands should not result in a significant noise difference.

UNITED STATES, CANADA AND MEXICO

For More Information

www.pipglobalsafety.com | Contact us

PIP
GLOBAL SAFETY

DISCLAIMER: If the above-mentioned recommendations are not followed, the protection and function afforded by the earplugs may be severely impaired. This may cause consequences for the user for which PIP Global Safety can not be held responsible. PIP Global Safety can not guarantee that any type of warning signals including communication with other people in the surroundings can be heard and understood by the wearer of this hearing protector. The sound level and frequency content of the warning signals as well as of the background noise can vary in different situations.

WARNING: All hearing protection affords limited protection. The user is responsible for the proper selection, use, care and maintenance of this device. Improper selection (including under/over protection), use or maintenance may lead to serious hearing loss. If there are any questions concerning this product contact your safety supervisor or PIP Global Safety.